



# Einhell

# CLASSIC

## POWER X-CHANGE

Cordless Lawn Trimmer

**GC-CT 18/24 Li-Solo**

**Item No.: 3411123**

Ident No.: 11017

Bar Code: 4006825626582

With the Einhell GC-CT 18/24 Li - Solo cordless grass trimmer in the tool shed, you have a practical helper whenever the planting in your grounds, garden and edges needs trimming. The cordless grass trimmer is a member of the Power X-Change series and therefore operates without a cable or the need for a source of electricity. Thanks to the Flower Guard, flowers and ornamental plants are effectively protected from damage. With a cutting width of 24 cm and a speed of up to 8500 rpm, the blade get the job done with plenty of power. The telescopic long handle is infinitely adjustable, so it can be adapted to any user. It is supplied complete with 20 plastic blades. The battery/charger are available separately

## Features & Benefits

- Member of the Power-X-Change family, 1x18V batteries necessary
- Flower guard - protecting plants against damage
- Telescopic long handle, infinitely adjustable
- Incl. 20 plastic blades
- User-friendly two-hand operation thanks to additional handle
- Fatigue-free and agile operation thanks to low weight
- Supplied without battery and charger (available separately)

## Technical Data

- Revolutions of knife 8500 rpm
- Cutting width of knife 24 cm

## Logistic Data

- Product weight 1.27 kg
- Gross weight single packaging 2.07 kg
- Dimensions single packaging 160 x 100 x 920 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 8.8 kg
- Dimensions export carton 950 x 335 x 230 mm



## Available as special accessories



Spare Blade-set PXC Trimmer  
Lawn Trimmer Accessory  
Item No.: 3405730  
Bar Code: 4006825560404  
Einhell Grey



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change 1  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory

## Battery-Running-Times

One Battery for All	 trimming <sup>1</sup> (min.)
1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

### Test setup:

1) lawn