



# Einhell

## EXPERT PLUS



Cordless Lawn Trimmer

**GE-CT 18 Li-Solo**

**Item No.: 3411172**

Ident No.: 21051

Bar Code: 4006825588255

The GE-CT 18 Li Solo cordless grass trimmer is a powerful tool which helps you keep your lawn looking immaculate in those places which cannot be reached by a lawn mower. Thanks to its low weight and handy size the tool provides good service for the trimming of large grounds and allotments where there is no connection to the electric power grid.

## Features & Benefits


- Member of the Power X-Change family, 1x18V batteries necessary
- Infinitely adjustable second handle
- Telescopic long handle, infinitely adjustable
- Motor head rotateable +/- 90° for vertical surfaces + lawn edges
- Motor head can be tilted to 5 settings - versatile working
- Flower guard - protecting flowers and trees against damage
- Compartment for 20 blades integrated in second handle
- Incl. 20 plastic blades
- Soft grip - perfect comfort
- Supplied without battery and charger (available separately)

## Technical Data

- Revolutions of knife 8500 rpm
- Cutting width of knife 24 cm

## Logistic Data

- Product weight 1.75 kg
- Gross weight single packaging 2.71 kg
- Dimensions single packaging 960 x 190 x 110 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 11.7 kg
- Dimensions export carton 980 x 395 x 240 mm

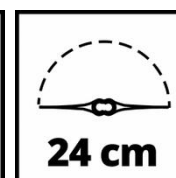

## Available as special accessories



Spare Blade-set PXC Trimmer  
Lawn Trimmer Accessory  
Item No.: 3405730  
Bar Code: 4006825560404  
Einhell Grey



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



Spare Blade-box PXC trimmer  
Lawn Trimmer Accessory  
Item No.: 3405736  
Bar Code: 4006825646283  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change 1  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



2x 5,2Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB  
Battery  
Item No.: 4511524  
Bar Code: 4006825656206  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



5,2Ah & 4A Fastcharger  
PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory

# Battery-Running-Times



One Battery for All

trimming<sup>1</sup>  
(min.)

1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

Test setup:

1) lawn