



Einhell

EXPERT PLUS



Cordless Jig Saw

TE-JS 18/80 Li-Solo

Item No.: 4321200

Ident No.: 21031

Bar Code: 4006825601398

The TE-JS 18/80 Li – Solo cordless jigsaw is a powerful tool for diverse sawing jobs. The selectable pendulum action and very smooth operation enable fast and precise cuts. The universal blade holder without tools saves valuable time, while the integrated plastic sliding element protects sensitive workpieces. The tool is supplied without battery and charger but it can be powered by Power X-Change rechargeable batteries.


Features & Benefits

- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- LED light to illuminate the cutting area
- Integrated plastic sliding element for sensitive workpieces
- Additional attachable cutting line guide for exact cutting
- Complete with chip guard for cuts without splintering
- Supplied without battery and charger (available separately)




Technical Data

- Number of strokes	2400 min ⁻¹
- Stroke height	25.4 mm
- Cutting depth in wood	80 mm
- Cutting depth in plastic	12 mm
- Cutting depth in steel	10 mm
- Max. bevel cuts	47 °
- Toolless saw blade change	yes

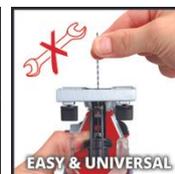

Logistic Data

- Product weight	1.75 kg
- Gross weight single packaging	2.286 kg
- Dimensions single packaging	235 x 90 x 225 mm
- Pieces per export carton	5 Pieces
- Gross weight export carton	11.9 kg
- Container quantity (20"/40"/40"HC)	4575 9480 11115

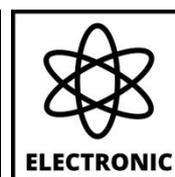

Available as special accessories



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Jigsaw-bl. set 4pc W/M Battery
Jig Saw Accessory
Item No.: 49625427
Bar Code: 4009316254271
KWB by Einhell



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (m)
1.5 Ah	7
2.0 Ah	9.5
2.5 Ah	11
3.0 Ah	14
4.0 Ah	20
5.2 Ah	30
6.0 Ah	32
8.0 Ah	40

Test setup:

1) wood - chipboard 19 mm