



Einhell

EXPERT

POWER X-CHANGE

Cordless Chain Saw

GE-LC 18/25 Li-Solo

Item No.: 4501761

Ident No.: 21020

Bar Code: 4006825608342

The Einhell cordless GE-LC 18/25 Li-Solo combines the outstanding quality of an Einhell product with the cutting performance of a high-quality OREGON guide bar and chain. Kickback protection and an instant-reaction mechanical chain brake protect you while you are working with the chainsaw. A catch bolt holds on to the chain if it jumps off the rail. The rugged metal stop claw keeps the saw stable for your added safety. The ergonomic handle gives you a firm grip on the cordless chainsaw. No tools are needed to adjust the chain tension or replace the chain. The chain is lubricated automatically. The large opening in the oil reservoir eliminates the need for a funnel. This product comes without a battery or charger.

Features & Benefits

- High-quality chain and bar from OREGON
- Toolless chain tensioning and changing
- Ergonomic handle
- Sturdy stop claws made of metal
- Kickback protection with mechanical instant chain brake
- Big filler opening
- Automatic chain lubrication
- Chain catch bolt
- Supplied without battery and charger (available separately)



Technical Data

- | | |
|-----------------------|---------|
| - Sword length | 250 mm |
| - Max. cutting length | 23 cm |
| - Chain cutting speed | 4.5 m/s |
| - Oil tank capacity | 200 mL |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 2.9 kg |
| - Gross weight (kg) | 3.99 kg |
| - Dimensions single packaging | 225 x 480 x 245 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 16.5 kg |
| - Dimensions Export Carton | 500 x 380 x 515 mm |
| - Container quantity (20"/40"/40"HC) | 1088 2208 2760 |



Available as special accessories



Spare Bar 25cm 1,1
Chain Saw Accessory
Item No.: 4501753
Bar Code: 4006825607017
Einhell Accessory



Spare Chain 25 cm 1,1 40T 3/8
Chain Saw Accessory
Item No.: 4501754
Bar Code: 4006825607024
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (pieces)
1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200
8.0 Ah	260

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm