

WEICON Wire Stripper No. 5, changing/replacing blades



Step 1: Remove the front cover




Step 2: Remove the back cover



Step 3: Press the length stop together and remove by pushing downwards



Image of the dismantled components

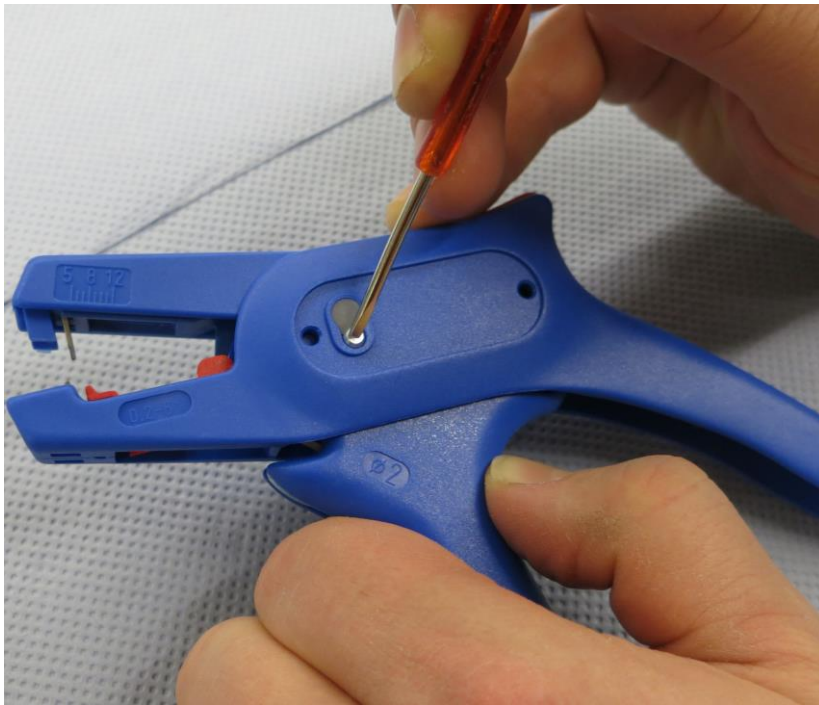

Step 4: Push bolt backwards



Detailed image bolt



Dismantled components



Step 5: Turn the bottom part of the handle forward




All the way to the front



Then remove the handle downwards



Image of both handle components

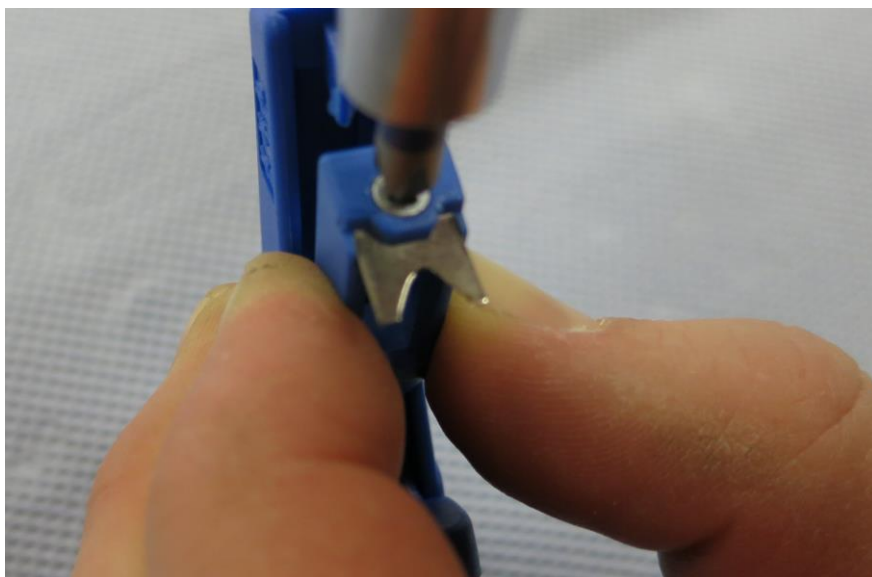

Step 6: Loosen upper screw and replace the blade




Detailed image of the upper blade



Step 7: Remove bottom blade downwards and insert new blade (possibly with weighting), it will snap into place



Step 8: Reinstall bottom handle component. Detailed image of steel spring

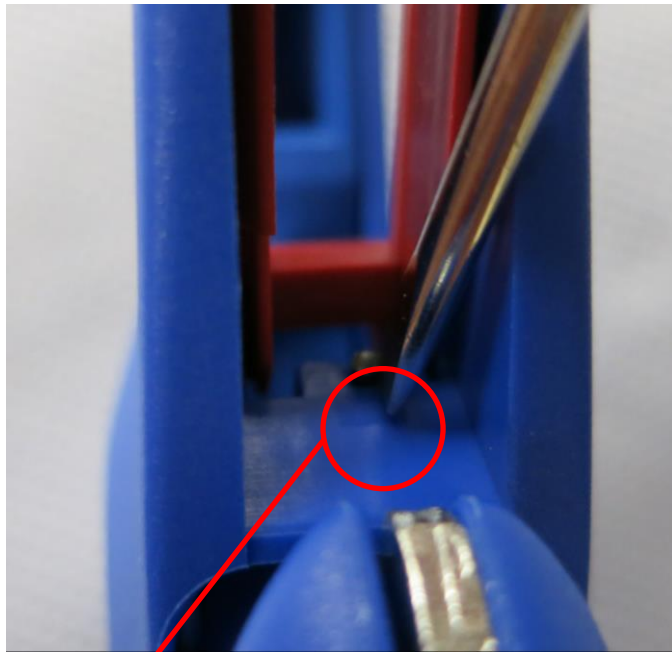


Attention: When assembling, the steel spring needs to be placed here again




Step 9: Push the slide forward



Step 10: Insert bolt precisely into its position

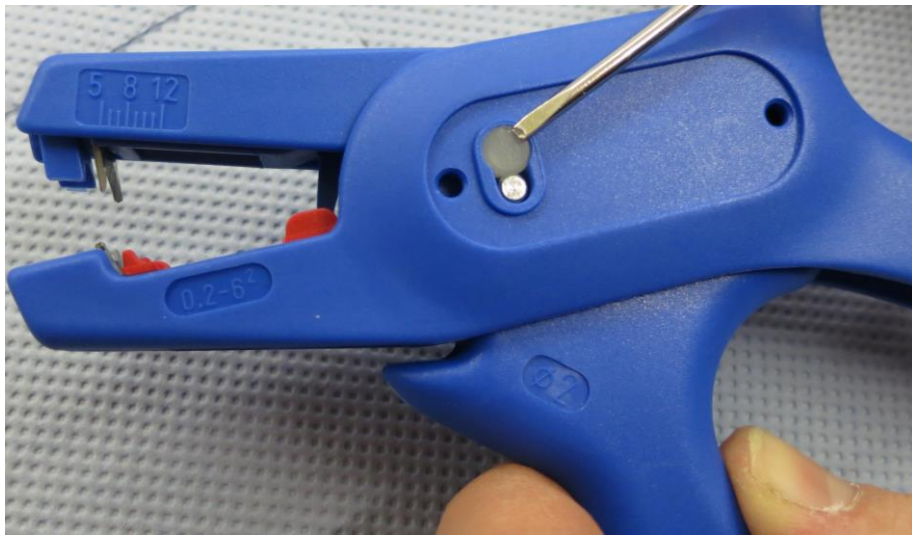

Then press in silicone buffer

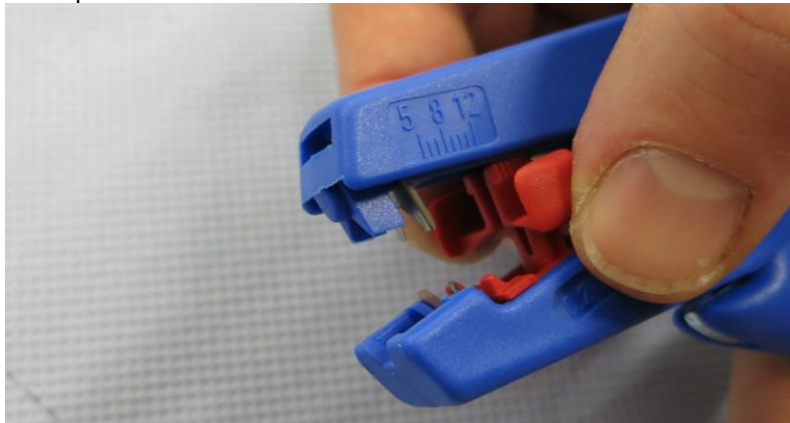

Step 11: Press length stop back in, facing the right way



Step 12: Reattach both covers



Carry out functional test. Done!